
PROCHARGE[®] - PROCHARGE[®] DESKTOP WIRING GUIDE Wired Workstation Setups

For helpful video instructions, visit: youtube.com/epidigitalchannel.

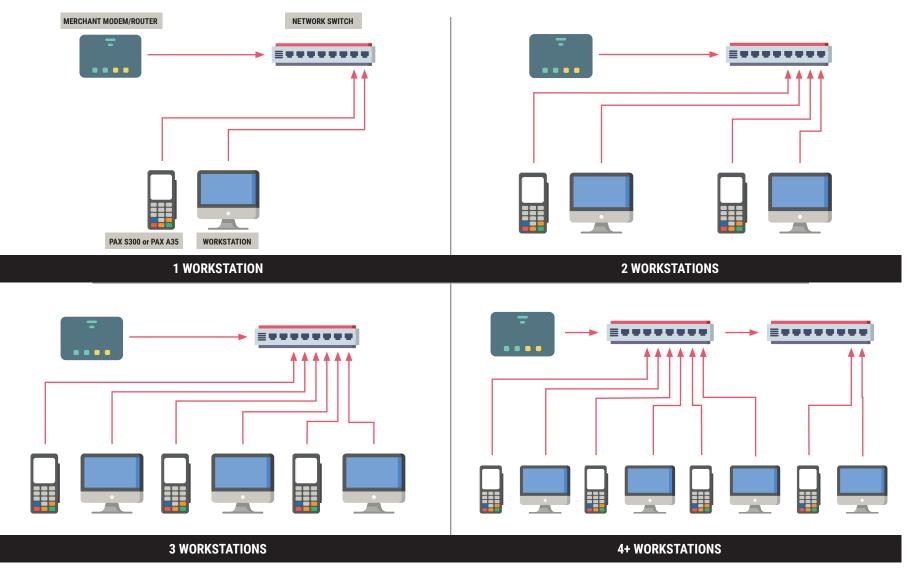


The PAX and Switch devices are included with your ProCharge® Desktop order. You should already have a Cable Modern from your local Internet Service Provider (ISP). Workstations already in use must be a Windows 10, 64-bit computer or MACOS12 (Monterey).



PROCHARGE® DESKTOP WIRING GUIDE

Wireless Workstation Setups

For helpful video instructions, visit: youtube.com/epidigitalchannel.

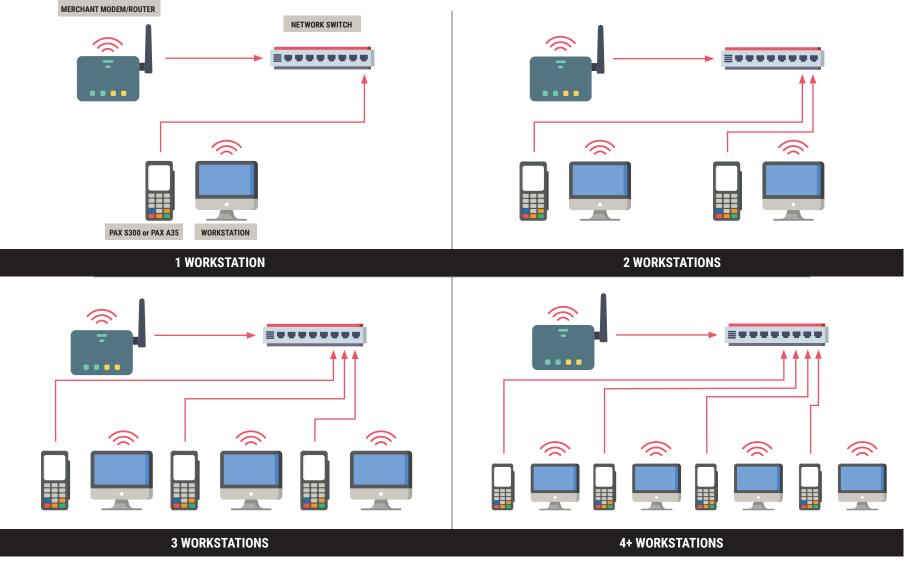

The PAX and Switch devices are included with your ProCharge® Desktop order. You should already have a Cable Modem from your local Internet Service Provider (ISP). Workstations already in use must be a Windows 10, 64-bit computer or MACOS12 (Monterey).

